



ComelitCCTV Advance Remote Setup

This guide will assume you have already set up your NVR to work locally by logging into the NVR and pairing the NVR with your ComelitCCTV app.

Web Browser NVR Remote Access

To set up remote access, go to comelitadvance.com. You will need the QR code for the specific NVR, and a username and password created on the NVR. You can use either your admin login or create a user.



	QR code number
	Enter Your Username
	Enter Your Password
Login	

You will also need the browser plugin installed to access the NVR on a browser. Link to download is here: [Comelit CCTV Browser Plugin](#)


COMELIT USA (USA AND CANADA)

12612 Clark Street
Santa Fe Springs, CA90670 | USA

T +1 (626)930-0388
F +1 (626)930-0488
T (toll free) +1 (888)692-9739

www.comelitusa.com
info@comelitusa.com

QR Code can be found under Function Panel>Network>P2P:

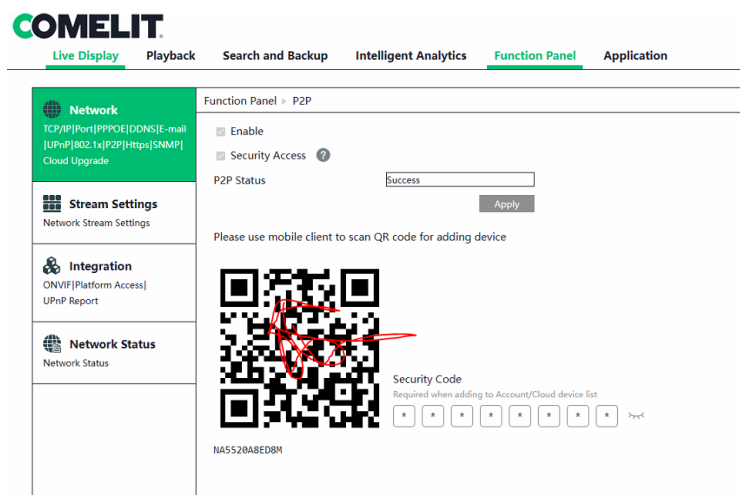

You can copy and paste the code below into QR code.


ComelitCCTV App (setup for admin)

To view the NVR on an app, download the ComelitCCTV app


APP Comelit CCTV :



Register for an account if not already done

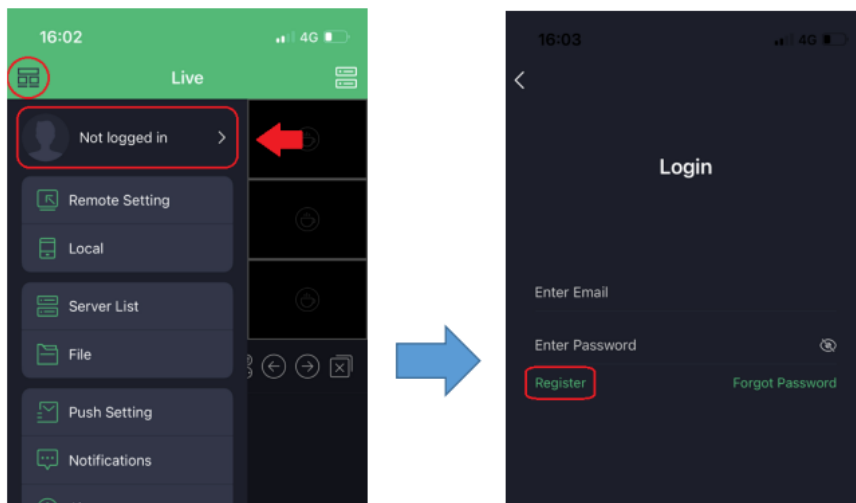


Once signed in, go to Add the device by tapping on the three dots on the top-right hand corner:

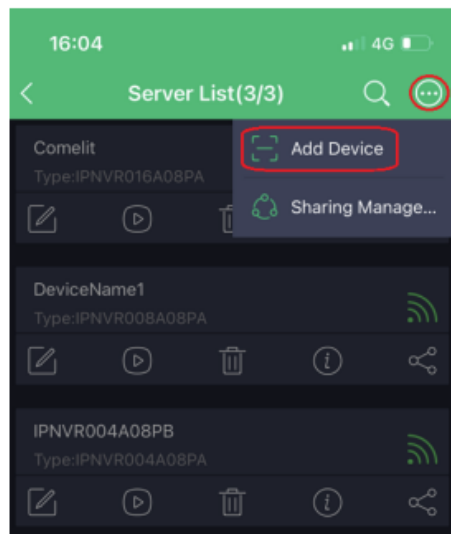

Scan the QR code from above. Please note, this will make you the admin of the NVR for the ComelitCCTV App.

ComelitCCTV App (setup for additional users)

For additional users to view the NVR, the admin is able to invite a ComelitCCTV account to join the CCTV access. Tap on the three dots on the top-right hand corner, go to Sharing Management and hit "Share". You can select which server to share and what camera access they will have.

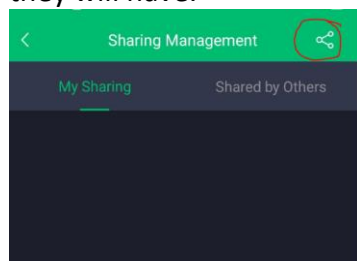

User Creation for Security

For the Username and Password, a user can be created under Functional Panel>Account>Add User.

Function Panel > Edit User > Add User

Account
Add User|Edit User|
Edit Permission Group

Security
Block and Allow List|
Preview On Logout|
Network Security|
Password security|
Edit Security Question|
Double Verification

User Status
Online User

Username

Password

Confirm Password

Permission Group

Allow Modify Password ☒ Enable

Remote access without verification code ☐ Enable ?

Remark

☐ Login Schedule

1.9 to 16 characters 2.Contains numbers/lowercase letters/capital letters/symbols.

Please note, if you check “Remote Access without verification code”, a second step to login is not required. Only one user can have this option enabled at a time.

If you receive this screen upon logging in,

COMELIT
KEEPING YOUR DATA SAFE

NA5520A8ED8M

Enter Authorization Code 1 (176 Secs) ?

Login

The admin must create an authorization code on the Comelit CCTV app for you to login.

